

# How to use your CLIQ Key



## 1 beep and green LED

Key accepted, the lock can be opened after the beep.



## 3 long beeps and green or red LED

The battery level is low. Please replace the battery.



## 3 beeps and red LED

The key is denied access.



## No beep or LED indication

If there is no beep the battery is dead or there is a problem with the key and/or cylinder.


## To ensure proper function of your key, please note the following precautions:




Avoid dropping the key.




Keep the key away from dirt and moisture.

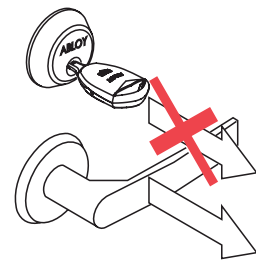

Do not use excess force on the key to pull doors open with it.

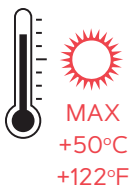

Avoid exposing the key to excessive heat or coldness.

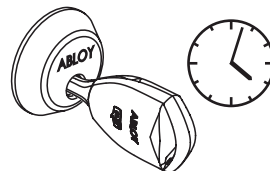

Do not leave the key in the lock, as this rapidly empties the battery.

For any assistance or issues please contact Community Safety and Innovation on 3810 6005.

Last Updated July 2020 - internal